

Fig. 1

1/5

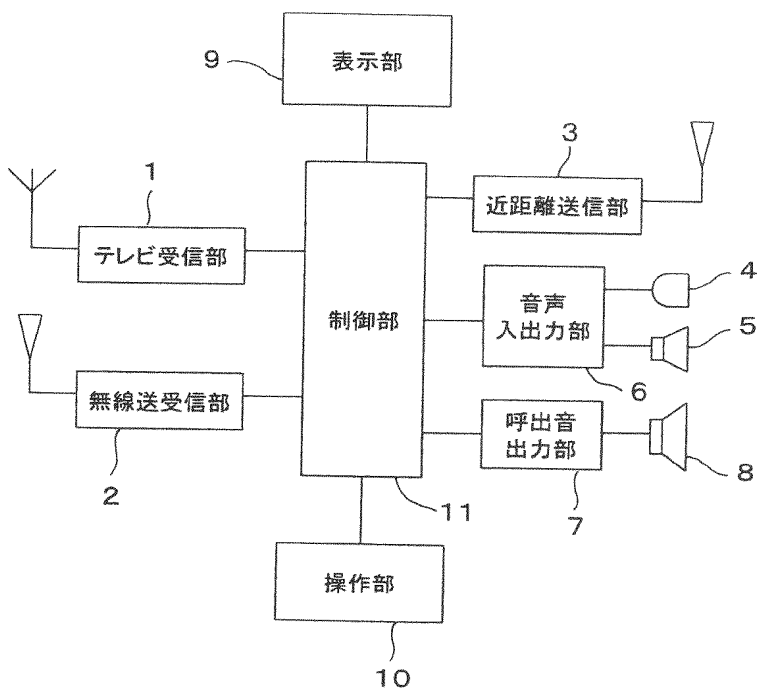


FIG. 1:

- 1. TELEVISION RECEIVING PORTION
- 2. RADIO TRANSMITTING/RECEIVING PORTION
- 3. NEAR FIELD TRANSMITTING PORTION
- 4. SOUND INPUT/OUTPUT PORTION
- 5. RINGTONE OUTPUT PORTION
- 6. DISPLAY PORTION
- 7. OPERATING PORTION
- 8. CONTROL PORTION
- 9.
- 10.
- 11.

Fig. 2

2/5

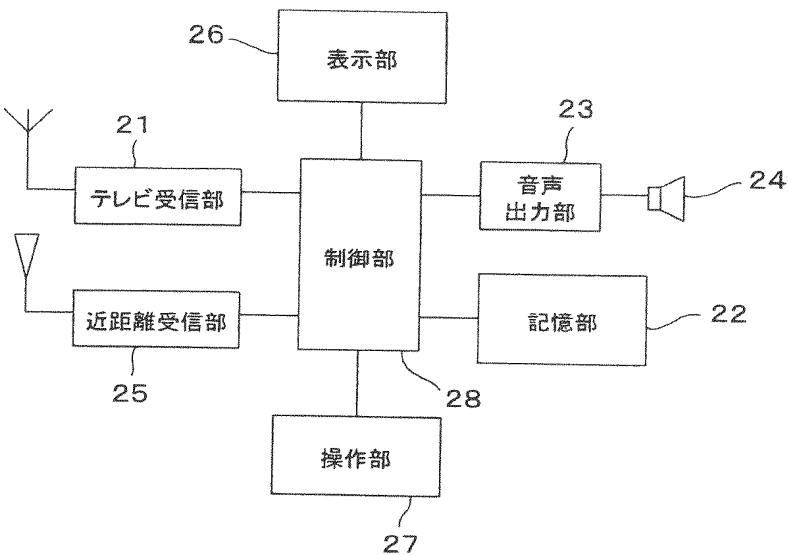


FIG. 2:

- 21. TELEVISION RECEIVING PORTION
- 22. MEMORY PORTION
- 23. SOUND OUTPUT PORTION
- 25. NEAR FIELD RECEIVING PORTION
- 26. DISPLAY PORTION
- 27. OPERATING PORTION
- 28. CONTROL PORTION

図3
FIG.3

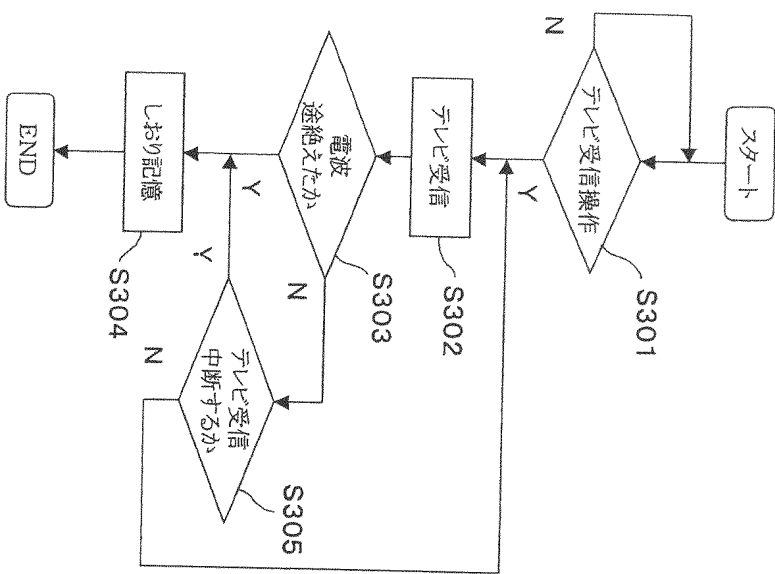


FIG.3:
START
S301 TELEVISION RECEIVING OPERATION ?
S302 RECEIVE THE TELEVISION
S303 RADIO WAVE IS DISCONNECTED ?
S304 STORE BOOKMARK
S305 THE RECEIVING OF THE TELEVISION IS INTERRUPTED ?

図4 Fig.4

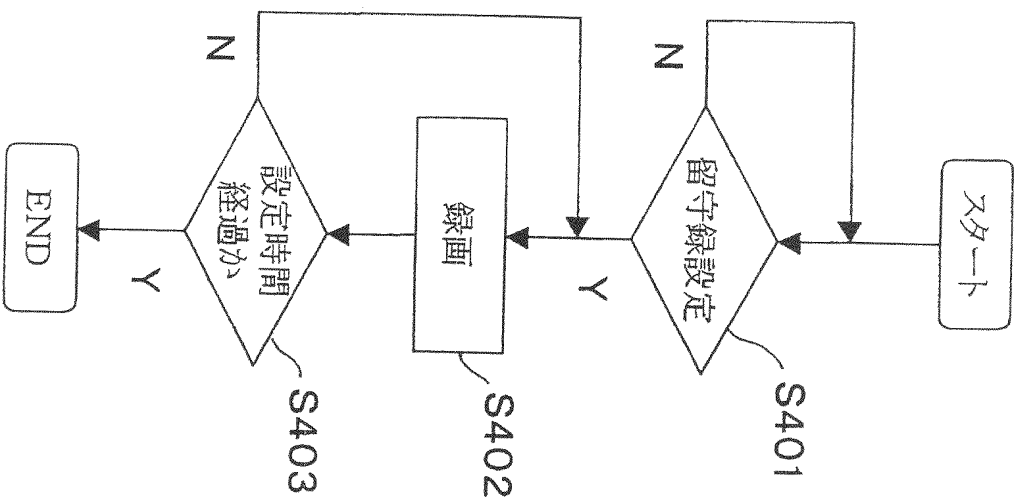


FIG.4:

START

S401 AUTOMATIC VIDEO RECORDING IS SET ?

S402 VIDEO RECORDING

S403 SET TIME HAS ELAPSED ?

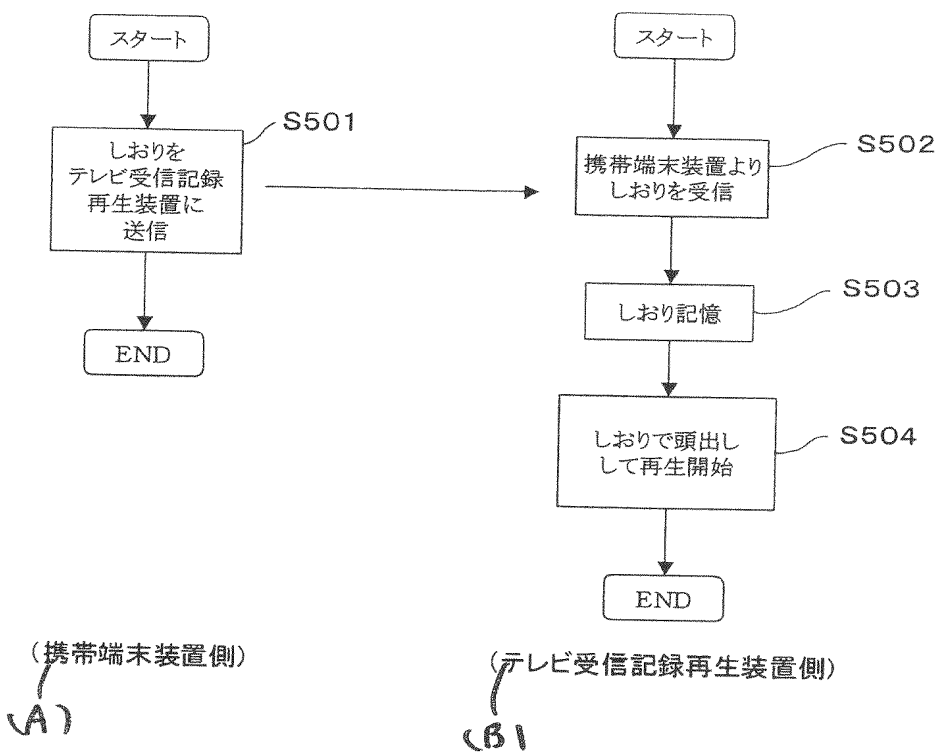


FIG. 5:

START

S501 SEND THE BOOKMARK TO THE TELEVISION RECEIVING/RECORDING/PLAYING EQUIPMENT

S502 RECEIVE THE BOOKMARK FROM THE MOBILE TERMINAL DEVICE

S503 STORE THE BOOKMARK

S504 SEARCH THE BOOKMARK ON THE PROGRAM AND PLAY THE PROGRAM

(A) MOBILE TERMINAL DEVICE SIDE

(B) TELEVISION RECEIVING/RECORDING/PLAYING EQUIPMENT SIDE